

User manual for TV and Chromecast, SkiStar Lodge Trysil

- Click on the TV & Entertainment option – choose TV. All the available channels will appear.

To connect with the Chromecast

- Click on the CONNECT option
- Choose Chromecast – two options to connect will appear:
 1. Write the 4859.tvcast.io in your browser. Set the code and click PAIR → "Successfully paired" press close → Wait for the Skistar website to appear → Open the app you want to cast, press the little casting icon and select the room number you staying in.
 2. Scan the QR CODE → "Successfully paired" and press close → Wait for the Skistar website to appear → Open the app you want to cast, press the little casting icon and select the room number you staying in.
- Do you have problems connecting to the Chromecast? Please contact the reception at +47 62 44 93 00.

IMPORTANT! DO NOT RESET THE CHROMECAST

Common errors

- Device not connected to Skistar Free Wifi
- Background pictures can appear, that is only a loading screen for the Chromecast, it may take a couple of minutes to load.
- If the background pictures do not disappear, disconnect the wifi from all your devices and try to connect with one device.
- If you by choosing Chromecast get a black screen, a cable could be damaged. Contact us so we can replace it.